

## Rearview Camera (Rear Assist)

From January 2011



**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




# Rearview Camera System Control Module

- J533 Data Bus on Board Diagnostic Interface
- J772 Rearview Camera System Control Module
- ST3 Fuse Panel 3
- SF10 Fuse 10 (On Fuse Panel F)
- T32b 32-Pin Connector
- T46b 46-Pin Connector
- T54a 54-Pin Connector
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2

- 51 Ground Connection in Luggage Compartment, Right
- 386 Ground Connection 21 (in Main Wiring Harness)
- 389 Ground Connection 24 (in Main Wiring Harness)

- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Avant
- \*3 Data Bus Wire (CAN Bus)

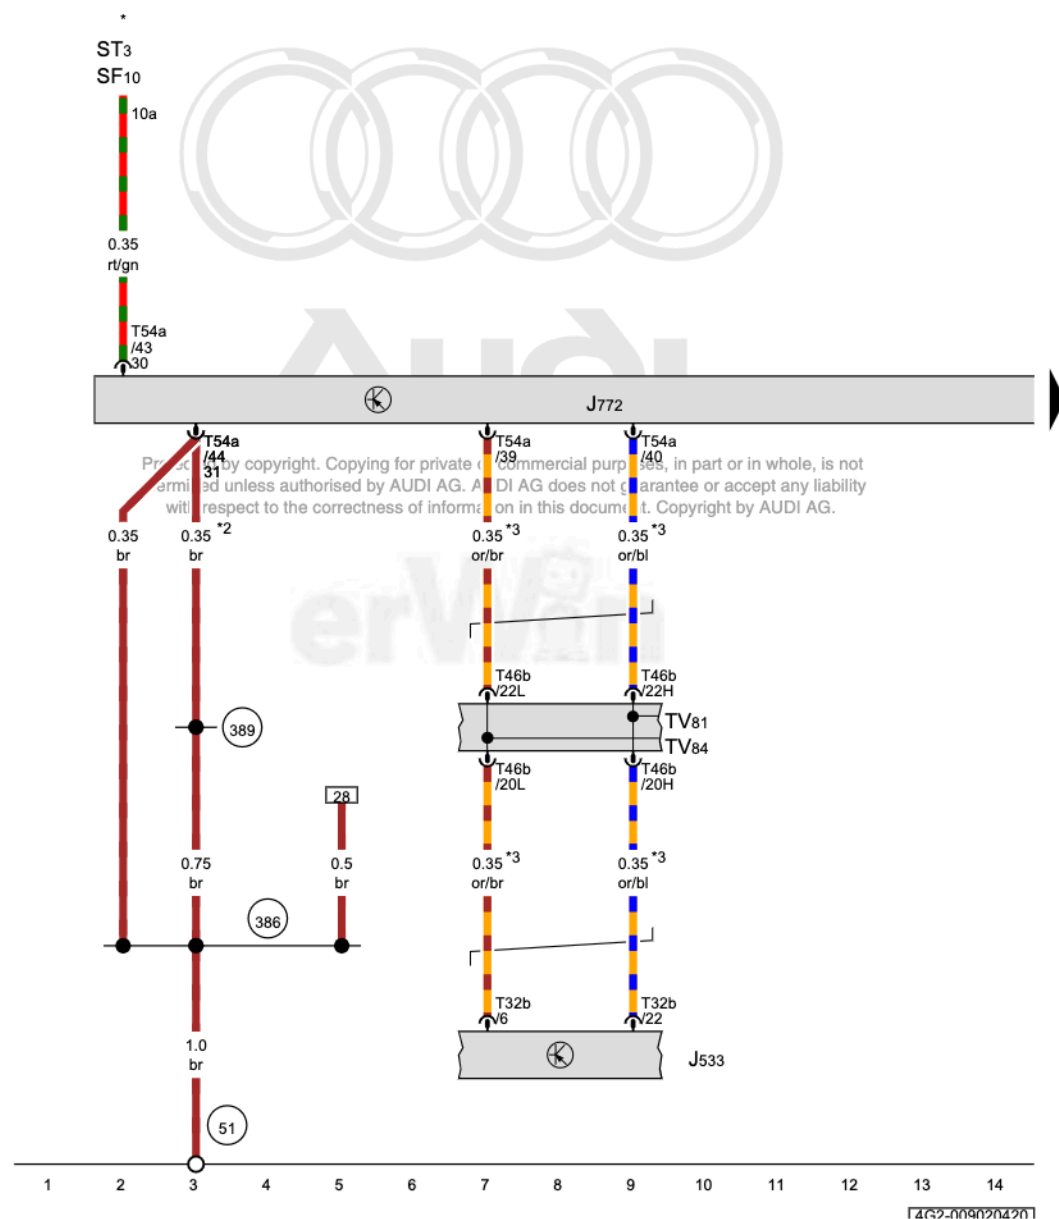


Rear Lid Lock Cylinder Unlock Button, Rearview Camera System Control Module, Rearview Camera

- F248 Rear Lid Lock Cylinder Unlock Button
- J393 Comfort System Central Control Module
- J772 Rearview Camera System Control Module
- J794 Information Electronics Control Module 1
- R189 Rearview Camera
- T2df 2-Pin Connector
- T2dg 2-Pin Connector
- T2eq 2-Pin Connector, Under the Rearview Camera Cover
- T2er 2-Pin Connector, Under the Rearview Camera Cover
- T2es 2-Pin Connector
- T12c 12-Pin Connector
- T12g 12-Pin Connector
- T32g 32-Pin Connector
- T54a 54-Pin Connector

383 Ground Connection 18 (in Main Wiring Harness)

- \* Refer to Applicable MMI (Information Electronics) Wiring Diagram
- \*2 For Vehicles with RMC Radio System
- \*3 For Vehicles with Rearview Camera System

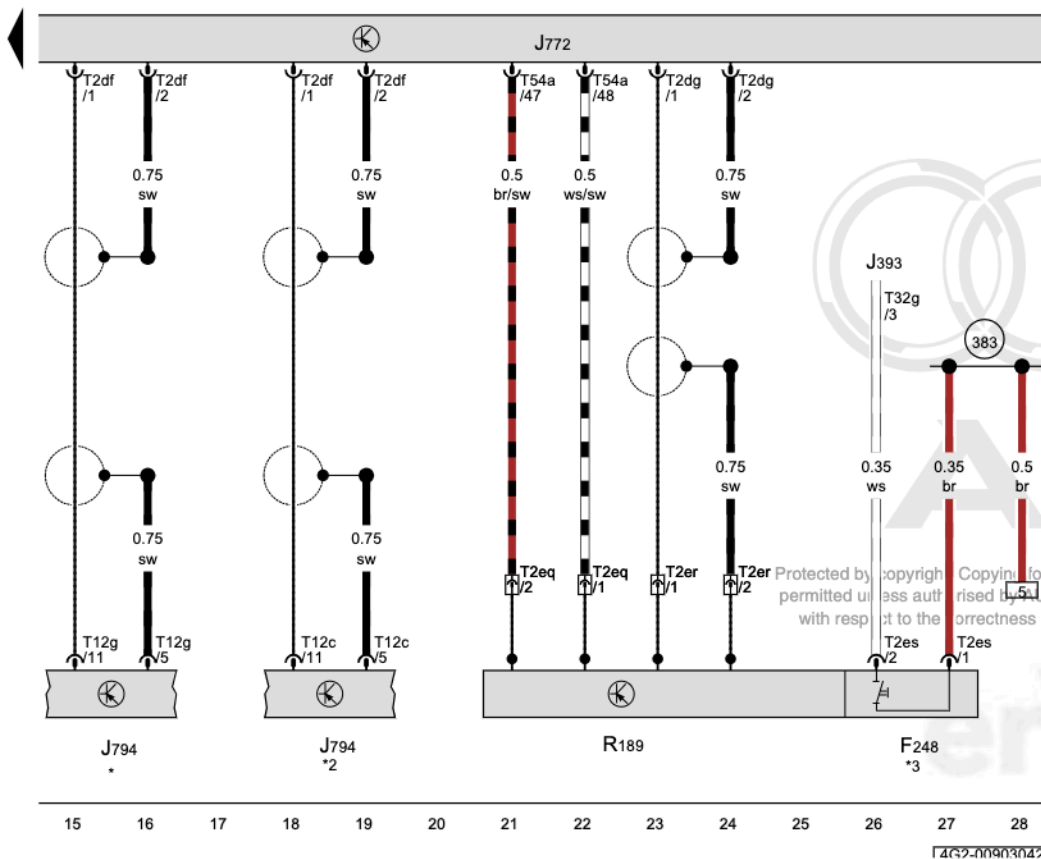

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink